



FULTERER USA INC. T +1 336 431 - 4646
542 Townsend Avenue T +1 800 395 - 4646
High Point, NC F +1 336 431 - 4620
27263-4552, USA info@fultererusa.com
www.fultererusa.com

FULTERER USA INC. T +1 909 947 - 0407
1900 Proforma Avenue, Unit F-2 F +1 909 947 - 0409
Ontario, CA info@fultererusa.com
91761, USA www.fultererusa.com

FULTERER GMBH
www.fulterer.com

FPS RF Programming Card/Key Card Operating Instructions

Activating the programming card

Initializing / activating a programming card

1. Press the push-button on the rear side
2. The lock will make a ticking sound (signal). Hold the programming card on the lock within 3 seconds of hearing this signal.
3. Two short ascending tones will confirm that the programming card has been saved successfully.

Initializing a key

Initializing the key card, key fob, or wristband.

1. Place the programming card onto the lock.
2. The lock will make a ticking sound (signal). Place the key card, key fob, or wristband onto the lock within 3 seconds of hearing this signal.
3. Two short ascending tones will confirm that initialization was successful.
4. The lock can now be opened using the key card or the chip key.

Deleting the key card or chip key

Key access denied

1. Place the programming card onto the lock.
2. The lock will make a ticking sound (signal). Place the key card, key fob or wristband onto the lock within 3 seconds of hearing this signal.
3. Two short ascending tones will confirm that deletion was successful.

Delete all keys

To delete all keys at once, place the programming card onto the lock for several seconds