


insert middle profile and push till the stop


1

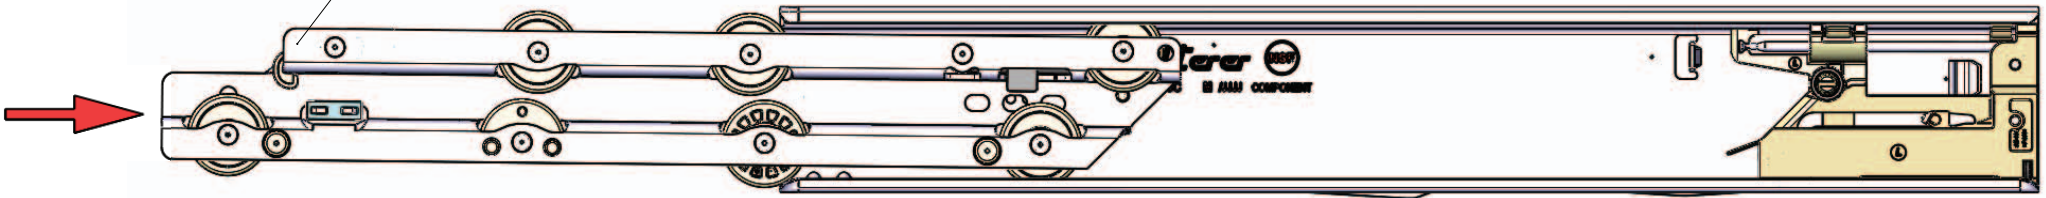

stop lever

B

2

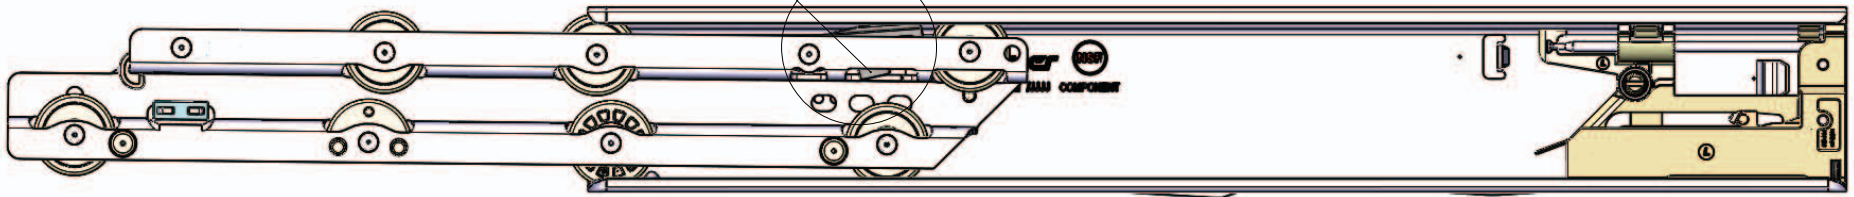


B

detail step 2

push stop lever up

3

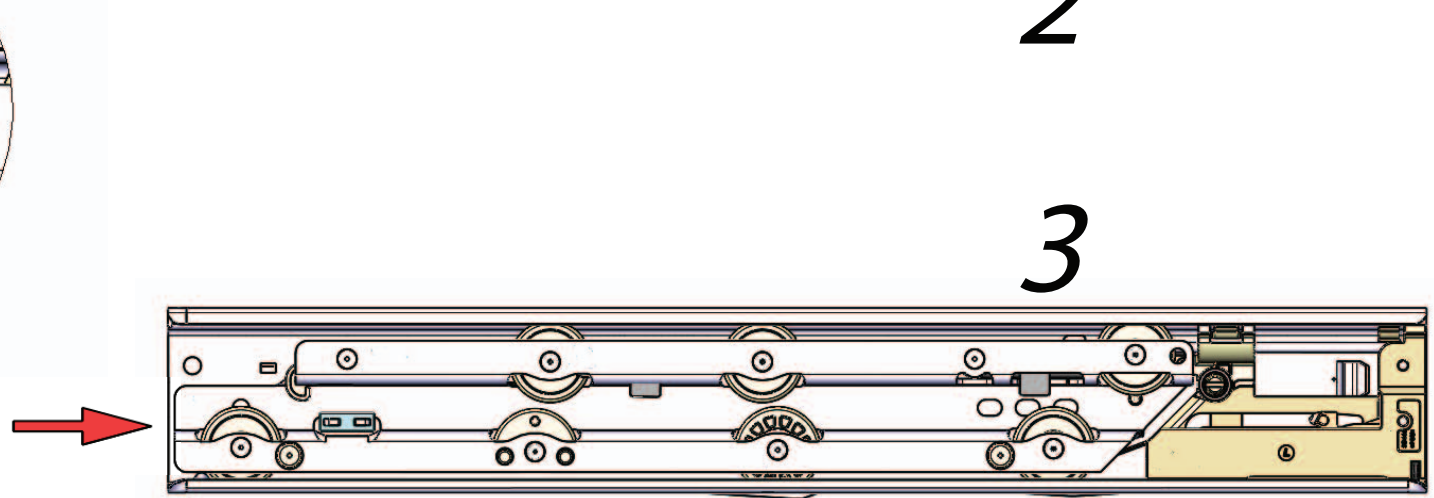

move the profil to the end position

